


RS485 network drop using Modular Network Adapters

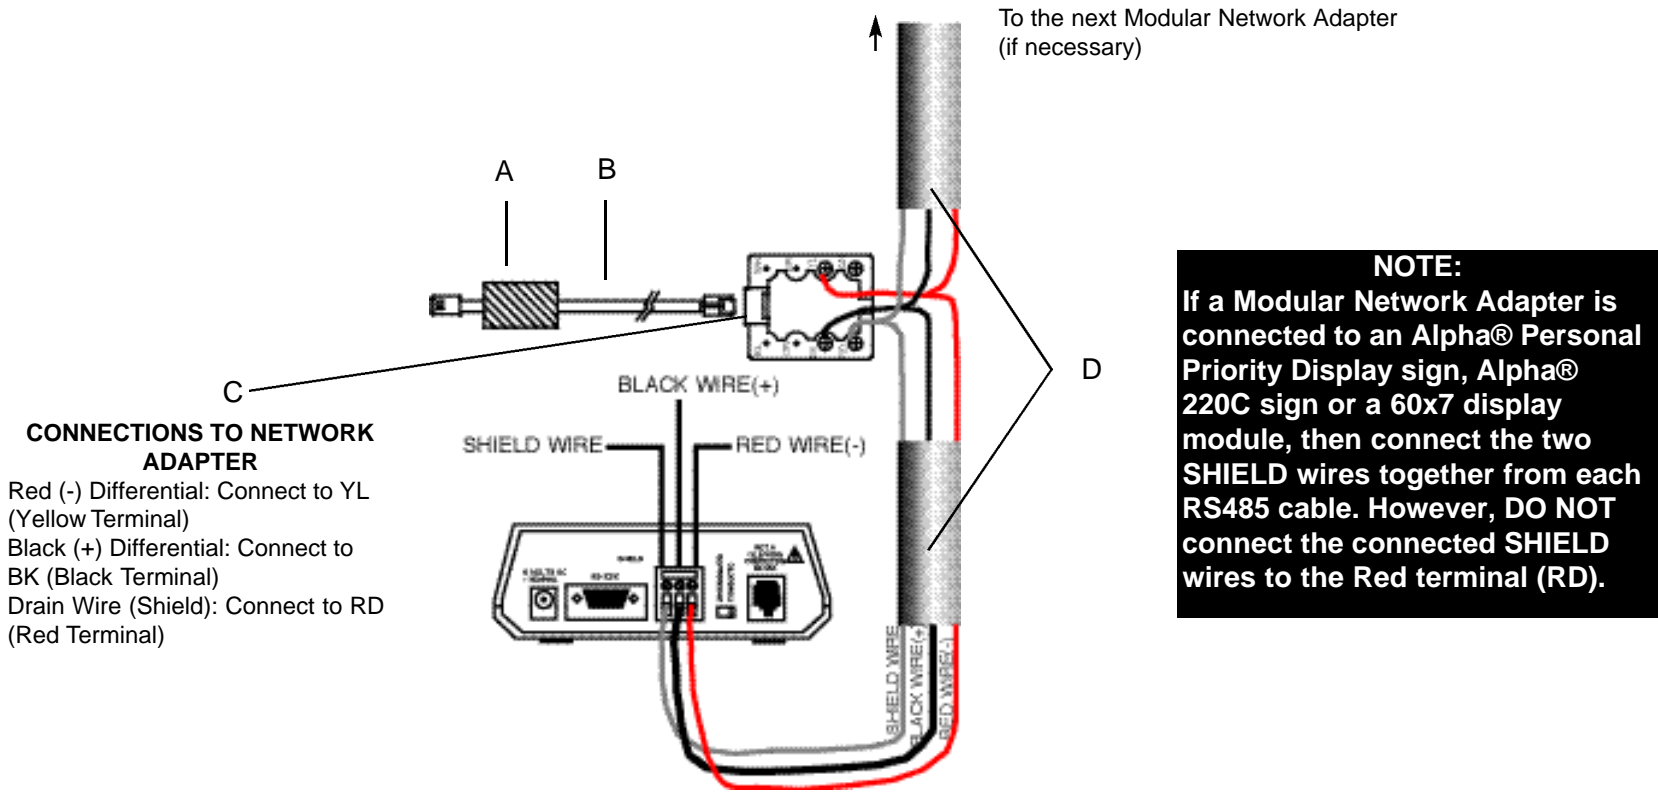

	P/N	Description
A	—	Ferrite: Insert the end of the 4-conductor data cable (B) with the ferrite core into the RJ11 port on the electronic display - the ferrite core must be closer to the electronic display than it is to the modular network adapter.
B	1088-8624	RS485 2.5m cable
	1088-8636	RS485 0.3m cable
C	4331-0602	Modular Network Adapter
D	1088-8002	RS485 (300m) bulk, used to connect a modular network adapter to a convertor box or to another modular network adapter.
E	1088-1111	RS232/RS485 convertor box